




**SOLENOID VALVE - DRY**  
**2/2 - NC (Normally closed)**  
 Direct acting - Total isolation  
**G 1/2**

**D132V24**

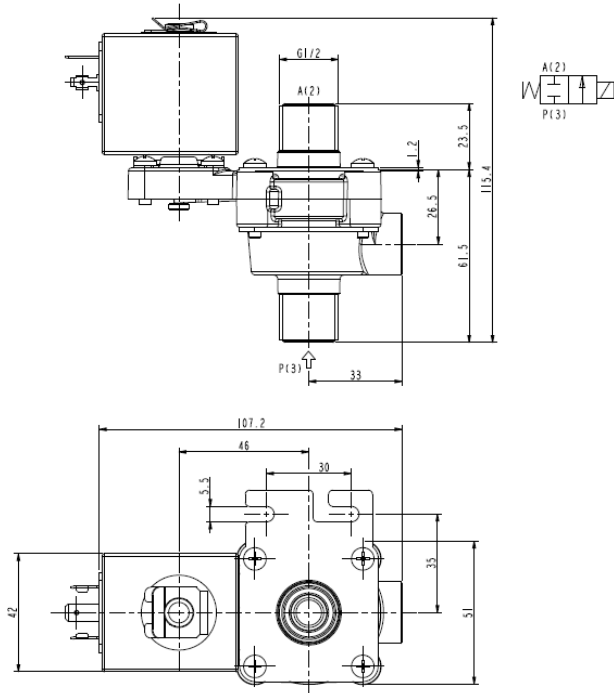

► **GENERAL FEATURES**

Direct acting, total isolation solenoid valve: the actuator is totally isolated from the medium so that the wetted parts are just the body and the diaphragm.  
 Possibility of disassembling for inspection.  
 Core duly coated by PTFE (polytetrafluoroethylene) based self lubricating material.  
 Suitable to shut off liquid and gaseous fluids (verify the compatibility of fluid with materials in contact).

► **TECHNICAL FEATURES**

Maximum allowable pressure (PS) 2 bar  
 Opening time ~ 30ms  
 Closing time ~ 30ms  
 Fluid temperature -10°C +90°C  
 Max viscosity 5°E (~37 cStokes or mm<sup>2</sup>/s)

► **MATERIALS IN CONTACT WITH FLUID**

Body PPS (see notes)  
 Sealing FPM

► **COIL**

Continuous duty ED 100%  
 Encapsulation material PET (polyethylene terephthalate) fibreglass reinforced  
 Coil insulation class F (140°C)  
 Ambient temperature -10°C +60°C  
 Electric connections DIN 46340 - 3 poles connector (EN175301-803)  
 Protection degree IP 65 (EN 60529) with plug connector  
 Voltages DC 12-24V (+10% -5%)  
 AC 24V/50Hz - 110V/50Hz (120V/60Hz) - 230V/50Hz (+10% -15%)  
 (Other voltages and frequencies on request)


Port size ISO 228	Orifice size (mm)	Differential pressure (bar)						Kv (m <sup>3</sup> /h)	Series and type		Power absorption			Sealings	Notes	Weight (kg)
		Δp min	Δp max				Valve		Coil	AC (VA)		DC (W)				
			Gases		Liquids					Inrush	Holding					
			AC	DC	AC	DC										
G 1/2	9	0	1,6	0,25	1,6	0,25	1,6	<b>D132V24</b>	<b>Z130A</b>	44	24	13	FPM	-	0,520	

► **NOTES**

- Sealings : FPM = Fluoro-carbon elastomer  
 - Body: PPS (Polyphenylene-sulfide) fibreglass reinforced, WRAS/KTW and NSF approval

# D132V24

## ► SPARE PARTS

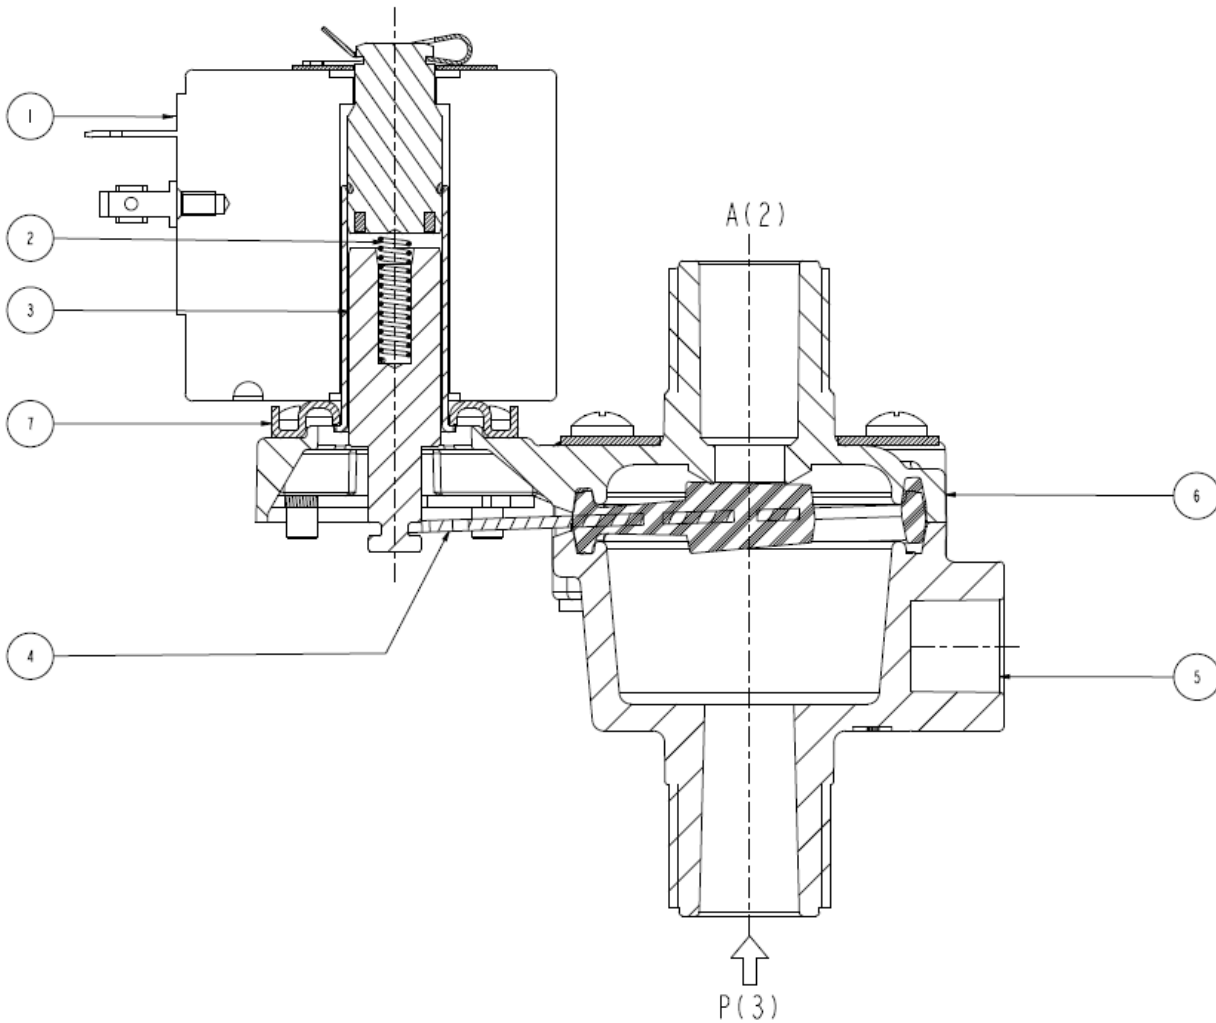

### Kit description

Body kit

Core kit

Lever seal

Kit guide pipe assembly

Coil

### Kit P.N.

G2986604

G2992801

3037301R

G31523

Z130A

### Consisting of:

Upper body pos.6  
Lower body pos.5

Core return spring pos.2  
Core pos.3

Lever seal pos.4

Guide pipe assembly pos.7  
Coil clip

Coil pos. 1

## ► INSTALLATION

- Solenoid valve can be mounted in any position; vertical with coil upwards preferred.
- In case of disassembling for usual maintenance, the fixing screws have to be tightened at 1,5 Nm max torque.
- Maximum driving torque of the pipe fittings for thread connections = 15Nm.